


# Installation Instructions

**00-02, 5.7L Chevrolet Camaro dual path exhaust**

**5798RS5/ BX 5798RS5**

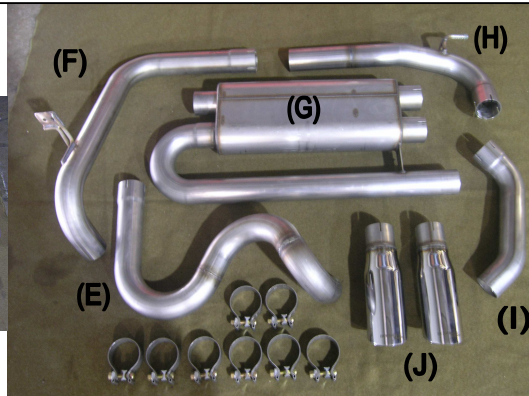

Please check Parts List below to insure that all parts are included in the product box

Note: anti-seize should be applied to all fastener threads, pipe slip joints and mating surfaces of ball /socket connections.

## Parts List and Description

- |     |          |                          |
|-----|----------|--------------------------|
| (A) | PN 5702A | -driver side adapter leg |
| (B) | PN 5702B | -crossover assembly      |
| (C) | PN 5702C | -left intermediate pipe  |
| (D) | PN 5702D | -right intermediate pipe |
| (E) | PN 5702E | -through cross-link pipe |
| (F) | PN 5702F | -over axle pipe          |
| (G) | PN 5702G | -muffler assembly        |
| (H) | PN 5702H | -left tailpipe           |
| (I) | PN 5702I | -right tailpipe          |
| (J) | PN 5702J | -polished tips (2)       |

## Hardware List

- (11)-2.5" heavy-duty clamps
- (1)-3/8" polyurethane torque damper
- (1)-anti seize compound
- (2)-stiffener bracket spacers
- (4)-8mm-1.25 x 45 mm bolts
- (4)-stiffener bracket spacers


**Note to installer: this system directly installs only with the stock catalytic converter pipes in place.**

## Installation instructions:

- 1.) Raise and support vehicle.
- 2.) Remove existing muffler and intermediate pipe from vehicle.
- 3.) Remove body stiffener bracket under driveshaft at rear of transmission.
- 4.) Remove nuts from "Y" pipe attachment flanges at factory catalytic converter outlet attachment points.
- 5.) Remove "Y" pipe from vehicle.
- 6.) Position one supplied 2.5" clamp over slip connector on Bassani "X" pipe assembly and insert driver side adapter leg into slip joint. Install urethane hanger/torque damper onto dual pins on adapter leg.
- 7.) Attach Bassani "X" pipe assembly with attached driver adapter leg to outlets of stock converters with factory hardware.
- 8.) Using supplied 8mm bolts, re-install body stiffener bracket with included spacers between bracket and car body.
- 9.) From this point, install remainder of supplied exhaust system into vehicle by referring to photos on next page and above; the systems uses all stock hanger positions.
- 10.) Align system and tighten all clamps.

**FOR TECHNICAL ASSISTANCE CALL TOLL-FREE (866) 782-3283**  
**2900 East La Jolla Anaheim, CA 92806**

**Installation pictures for 5798RS-5 / BX5798RS-5**

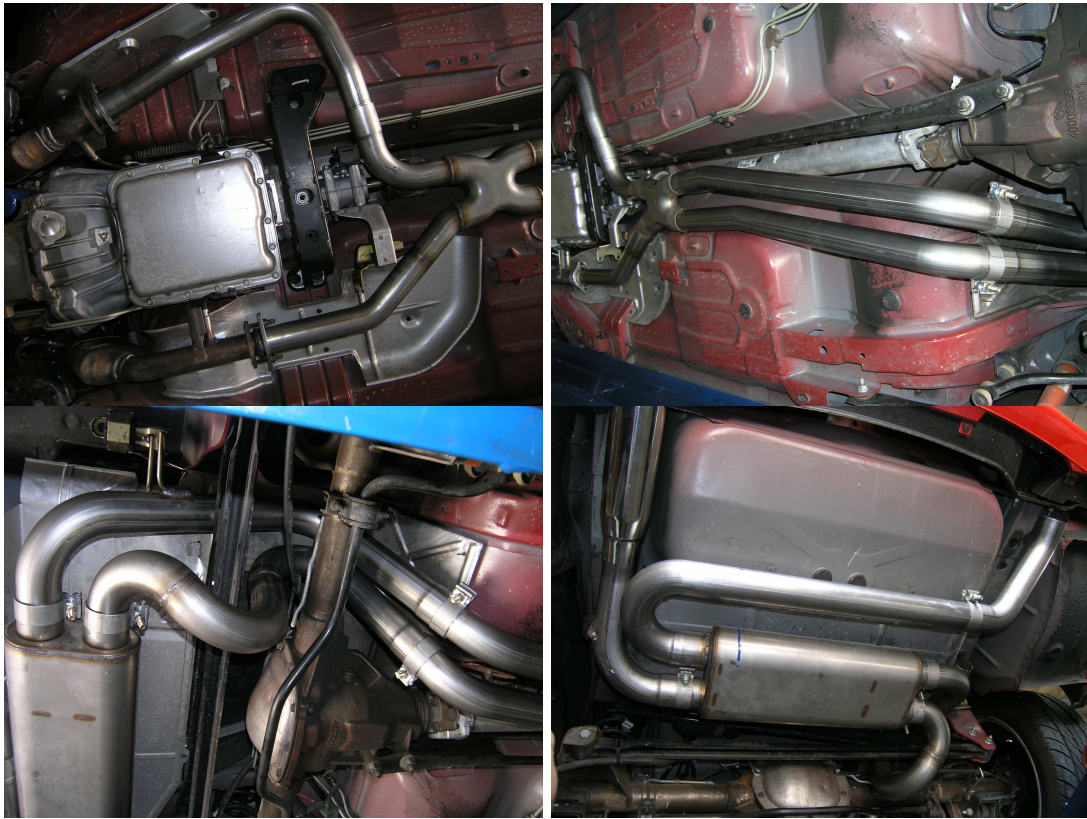

**FOR TECHNICAL ASSISTANCE CALL TOLL-FREE (866) 782-3283  
2900 East La Jolla Anaheim, CA 92806**